

whatlock[®]

Magnetic Security Lock

The Professionals' Choice

Fitting Instructions



Quick & easy to
fit in just 5 steps

Fitting instruction video



whatlock.com

Before Fitting



Check that all of the components are present.



Ensure the area where you are fitting the locks is clean, dry and free from dust.



Decide on a position to fit whatlock® e.g. on a cupboard 50mm (2 inches) below the door knob.



The simplest and quickest method to fit whatlock® is to use the 3M adhesive pads.



You will need a sharp pencil or small marker pen.



Please allow 24 hours for full adhesion before using the lock.



For added strength, fit with the supplied screws. You will need as above, a bradawl and a small Phillips screwdriver.

Components



Strike Plate x 2




Lock x 2



Screws x 12



Key x 1

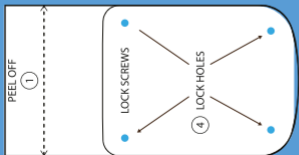

Template x 2

1

On the template, peel off the narrow adhesive strip.

Affix onto the front face of the cupboard side with the guide line over the inside edge.



2

Fold the template onto the inside wall of the cupboard.

Mark the two strike plate hole locations.

3

Leave the template in position.

Peel the backing paper from the foam tape. Close the door firmly onto the template.



4

Open the door, the template will have transferred to the exact location for the lock on the inside of the door. Mark the four holes. Remove the template.

5

To stick down the strike plate and lock using the 3M adhesive pads, remove the backing from the pad and place firmly into position by matching the holes to the pre-marked locations.

To use the screws, as above and use a bradawl to start the screw hole and use the screws provided.

Allow 24 hours for the adhesives to set before use.



Fitting to Drawers

There are many, sizes, shapes and kinds of drawers. Please ensure whatlock® will work on your type of drawer before commencing fitting. The example below illustrates how whatlock® can be fitted to a drawer.



Follow the same 5 Steps Fitting Instructions as described for cupboards.

Using your whatlock®

To open, pass the magnetic key over the front of the door in line with the location of the lock.

The catch will release, allowing the door or drawer to open. Automatically locks when the door or drawer is closed.

Hidden from the outside.



Locking Bar

The lock can be switched off and left in the open position when not in use. To activate hold the blue beak (a) in and then push the blue bar (b) from one side to the other, as shown below:



Keeping the Key Safe and Stored

Use the open feature on the key and hang the key up high in a cupboard, attach it to your belt or use a lanyard.

Technical Information

Magnets

whatlock® uses small specialised neodymium magnets. They are specifically designed and manufactured for whatlock® to produce a very powerful magnetisation between the lock and key. whatlock® cannot be opened by other magnets that are available on general sale.

Removal

Should you have a need to remove whatlock®, gently prise off the lock and strike plate using a metal scraper. Clean any residual adhesive with turpentine. There will be no marks left on the cupboard or drawer.

Recycling

Please follow the latest guidelines to dispose all packaging, and where necessary, the disposal of neodymium magnets and ABS plastics.

Plastics

The plastic used in the production of whatlock® are ABS (Acrylnitril-Butadien-Styren).

Advice



Always keep the magnetic key in a safe place.



Ensure the magnetic key is out of the reach of children.



whatlock® uses very strong magnets – keep away from credit cards, pacemakers and sensitive electronic and storage devices.



whatlock® will operate through glass, wood, ceramic tiles, laminates and non-ferrous metals.



whatlock® is suitable for cupboards, drawers and cabinets up to 25mm (1 inch).



Watch the Fitting Instruction video on whatlock.com or our YouTube channel to assist you in ensuring whatlock® meets your expectations.



This product is a deterrent and not a replacement for adult supervision

High Quality Performance Guarantee

We're sure that you'll be happy with the high quality and performance of your new whatlock®.

Help and Advice

However, if you are not entirely satisfied or are having problems with your whatlock®, we are here to help so please contact us so that we can assist you.

Customer Feedback

We welcome feedback at any time regarding your whatlock® experience.

Telephone:

01482 534214

Email:

info@gohtrading.com

whatlock.com

30 Days Return Guarantee

Alternatively, should you wish to return your whatlock®, you have 30 days to do so from your date of receipt. The item, must be unused and in the same condition that you received it. Please include the original packaging and the confirmation email you received at the time of ordering.

We will notify you when we have received your item and assuming the product is undamaged, a full refund will be made to the card that was used for the original payment. Any costs incurred in returning the item will not be refundable.

We hope that any potential dangerous situations have been avoided by using whatlock®.

whatlock®

Thank you for purchasing whatlock®, your new magnetic security locking system.

whatlock® is the original magnetic security lock – the Professionals' Choice

The following information will ensure that you enjoy the best results from whatlock®, giving you reassurance and peace of mind that potentially dangerous materials or valuables are protected and safe from children and other groups.



Key & Lock Made in China | Packed & Checked in the UK

whatlock.com

whatlock®

Magnetic Security Lock

The Professionals' Choice

Easy-fit locking system

Ideal for home or business

One key opens multiple locks

We take our responsibility as a manufacturer very seriously. whatlock® meets the latest and highest safety standards and is free of harmful substances and chemicals. When you buy whatlock® you can be absolutely confident that whatlock® will ensure you have peace of mind that all is safe and secure.

whatlock® is a registered Trade Mark and Product Design



GOH Trading Ltd, One Business Village, West Dock Street, Hull, HU3 4HH, United Kingdom

whatlock.com